



User manual

DELLOCK[®]
we move the world

USB 2.0 CardReader 3.5" 40 in 1



Product-No:91628
User manual no:91628-a
www.delock.com



Description

This DeLock card reader can be installed into the 3.5" drive bay of your PC. Black, silver and beige front blends are included for different chassis colors. This card reader can read and write 40 different memory card formats.

Specification

- USB 2.0 Card Reader 40 in 1 with 1x USB 2.0 Port in a metal case for 3.5" bay mounting
- Two media slots can be used at the same time for data exchange
- USB 2.0 specification revision 2.0
- Data transfer rate up to 480 Mbps
- Hot Swap, Plug & Play

• Supports following memory cards:

Compact Flash I/II, CF ultra II, CF Extreme II, IBM Micro Drive, Magic Store, Smart Media, Smart Media ROM, xD, xD M-Type, xD H-Type, Secure Digital, SD ultra II, SD ROM, Multi Media Card-I, Multi Media Card-II, MMC 4.0, MMC Dual Voltage, MMC Plus, Memory Stick, MS (4-bit), MS Pro, MS-Pro Magic Gate, MS Select, MS ROM, MS Magic Gate, MS High Speed, MS ultra II, etc.

With Adapter for: mini SD, Micro SD, T-Flash, RS-MMC, RS-MMC Dual Voltage, RS-MMC 4.0, MS-Duo, MS-Duo Magic Gate, MS-Pro Duo, MS-Pro Duo Magic Gate, MS Micro, M2

System requirements

- Windows 98/98SE/ME/2000/XP/Vista, Mac OS 8.6x or later, Linux OS 2.4.x or later
- PC with one free 3.5" Bay

Package content*

- Card Reader with cable for Mainboard
- Connecting cable to USB Port
- 1x silver & 1x black colour front panel
- Driver CD
- User manual

*Make sure that product package contains all items before operation. If any item is missing or damaged, then please contact your dealer immediately.



Hardware Installation

Note:

Follow the general instructions for installation of the CardReader. If necessary, read the manual of your computer, or ask a specialist for help.

1. Turn off your PC, and unplug the power cord.
2. Open the housing.
3. Remove the panel from the available 3.5" bay.
4. Insert the CardReader into the bay and screw the CardReader to the housing.
5. Connect the CardReader directly to the Mainboard or use the cable, which is included in the package, to connect the USB A cable outside of the housing.
6. Reattach the housing, and connect the power cord to the AC adapter.

Driver Installation

1. Switch on your computer.
2. The CardReader will be recognized and you can start using the device immediately.

Support Delock

If you have further questions, please contact our customer support support@delock.de / www.delock.com or phone +49 30 81789324*.

You can contact our service hotline during the following times:

Mon – Fri: 9:00 – 16:30 pm

* A connection fee applies according to fee schedule of your local telephone provider.

You can find current product information on our homepage: www.delock.com

Final clause

Information and data contained in this manual are subject to change without notice in advance. Errors and misprints excepted.

Copyright

No part of this user manual may be reproduced, or transmitted for any purpose, regardless in which way or by which means, electronically or mechanically, without explicit written approval of Delock.

Edition: 08/2008