



User manual

DELOCK[®]
we move the world

Express Card to eSATA II



Product-No: 61386
User manual No: 61386-a
www.delock.com



Description

This adapter complies with the express card / 34 standard. It expands your notebook by two additional eSATA II ports to connect SATA devices such as external hard drives.

Specification

- 2x eSATA
- Express Card / 34 standard, specification 1.0
- Express Card data transfer rate up to 250 Mbps
- SATA II specification, data transfer rate up to 3 Gbps
- Supports SATA Port-multiplier (multiple SATA devices at one Port)
- Supports Legacy Command Queuing (LCQ) and Native Command Queuing (NCQ)
- Hot Plug, Hot Swap
- for Windows 2000/XP/2003, Linux

System requirements

- Notebook with a free Express Card Slot
- Windows 2000/XP/2003, Linux

Package content*

- Express Card eSATA II
- Driver CD
- User manual

*Make sure that the product package contains all items before operation. If any item is missing or damaged, then please contact your dealer immediately.

Note:

Follow the general instructions for installation of the adapter. If necessary, read the manual of your computer, or ask a specialist for help.

Driver Installation

Windows XP Service Pack 2

1. Switch on your computer.
2. Insert the card into your Express Card Slot.
3. Afterwards, Windows displays the Hardware wizard.
4. Put the driver CD in the CD-ROM drive and choose the option "No, not this time" and click "Continue".



-
5. Choose "Install software automatically" and click "next".
 6. The driver will be found automatically and installed. Click on "Finish".
 7. You can now start to use the device.

Windows XP Service Pack 1

1. Switch on your computer.
2. Insert the card into your Express Card Slot.
3. Afterwards, Windows displays the Hardware wizard.
4. Put the driver CD in the CD ROM drive and click on "next".
5. Choose "Install software automatically" and click "next".
6. The driver will be found automatically and installed. Click on "Finish".
7. You can now start to use the device.

Windows 2000

1. Switch on your computer.
2. Insert the card into your Express Card Slot.
3. Afterwards, Windows displays the Hardware wizard.
4. Put the driver CD in the CD ROM drive and click on "next".
5. Please choose "Search for a suitable device driver" and click on "Next".
5. Select the "CD drive" option and click on "next".
6. After the driver is located, click on "next". Click on "finish".
7. You can now start to use the device.

Windows 2003

1. Switch on your computer.
2. Insert the card into your Express Card Slot.
3. Afterwards, Windows displays the Hardware wizard.
4. Put the driver CD in the CD ROM drive and click on "next".
5. Please choose "Search for a suitable device driver" and click on "Next".
6. The driver will be found automatically and installed. Click on "Finish".
7. You can now start to use the device.



Support Delock

If you have further questions, please contact our customer support
support@delock.de / www.delock.com or phone

0700 - DELOCKGE (0700 - 335 625 43).

You can contact our service hotline during the following times:

Mon – Fri: 9:00 – 17:30 pm charge 0,12 € / min*

* A connection fee applies according to fee schedule of Deutsche Telekom AG
or your local telephone provider.

All callers outside of Germany dial please 00493081789324

You can find current product information on our homepage:

www.delock.com

Final clause

Information and data contained in this manual are subject to change without
notice in advance. Errors and misprints excepted.

Copyright

No part of this user manual may be reproduced, or transmitted for any purpose,
regardless in which way or by which means, electronically or mechanically,
without explicit written approval of Delock.