



User manual

DELOCK[®]
we move the world

Multipanel 5.25"



Product-No: 91631
User manual No: 91631-a
www.delock.com



Description

This DeLock multipanel can be installed into the 5.25" drive bay of your PC. Black, silver and beige front bezel are included for different chassis colors. This card reader can read and write 34 different memory card formats, furthermore you can connect different devices to the multipanel.

Specification

- For 5.25" bay mounting
- USB 2.0 Card Reader 34 in 1
- 2 x USB 2.0 ports
- 1 x FireWire A port
- 1 x eSATA port
- Audio, microphone
- For Windows 98/98SE/ME/2000/XP

• Supports following memory cards:

Compact Flash I/II, IBM Micro Drive, Magic Gate, Smart Media, Smart Media ROM, xD, xD M-Type, xD H-Type, Secure Digital, mini SD, SD ROM, SDHC, T-Flash, Micro SD, Multi Media Card-I, Multi Media Card-II, MMC 4.0, MMC Dual Voltage, MMC Plus, MMC Mobile, MMC Micro, RSHS-MMC, RS-MMC, RS-MMC Dual Voltage, RS-MMC 4.0, Memory Stick, MS Select, MS ROM, MS Pro, MS Magic Gate, MS-Pro Magic Gate, MS-Duo, MS-Duo Magic Gate, MS-Pro Duo, etc.

System requirements

- PC with one free 5.25" Bay
- Windows 98/98SE/ME/2000/XP

Package content*

- Multipanel with cables
- 1x silver & 1x black colour front bezel
- Driver CD
- User manual

*Make sure that product package contains all items before operation. If any item is missing or damaged, then please contact your dealer immediately.



Hardware Installation

Note:

Follow the general instructions for installation of the CardReader. If necessary, read the manual of your computer, or ask a specialist for help.

1. Turn off your PC, and unplug the power cord.
2. Open the housing.
3. Remove the panel from the available 5.25" bay.
4. Insert the multipanel into the bay and screw the multipanel to the housing.
5. Connect the cables of the multipanel to the Mainboard resp. outside of the housing.
6. Reattach the housing, and connect the power cord to the AC adapter.

Driver Installation

Windows 2000/XP

1. Switch on your computer.
2. The Multipanel will be recognized and you can start using the device immediately.

Windows 98/ME

1. Switch on your computer.
2. Afterwards, Windows displays the Hardware wizard.
3. Click on "cancel".
4. Put the driver CD in the CD ROM drive.
5. Open the folder: "Driver V1.26.\Setup_1.26", click "Next".
6. As soon as the message appears "Please Plug in the Driver...", click on "ok".
7. Choose "Yes, restart computer" and click "Finish".



Support Delock

If you have further questions, please contact our customer support support@delock.de / www.delock.com or phone 0700 - DELOCKGE (0700 - 335 625 43).

You can contact our service hotline during the following times:

Mon – Fri: 9:00 – 17:30 pm charge 0,12 € / min*

* A connection fee applies according to fee schedule of Deutsche Telekom AG or your local telephone provider.

All callers outside of Germany dial please 00493081789324

You can find current product information on our homepage:

www.delock.com

Final clause

Information and data contained in this manual are subject to change without notice in advance. Errors and misprints excepted.

Copyright

No part of this user's manual may be reproduced, or transmitted for any purpose, regardless in which way or by which means, electronically or mechanically, without explicit written approval of Delock.